HASSTA ENEC (Class I. and II.)


Installation instructions



1. Unpack the luminaire.




4. Connect the 5 core cable to the power supply (Class I.).

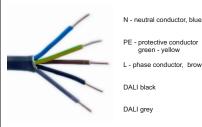

PE - protective conductor areen - vellow L - phase conductor, brown DALI black

7. Connect the 5 pin connector Gesis to the power supply (Class I).

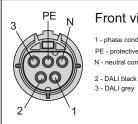

Front view

1 - phase conductor brown PE - protective conductor, green - yellow N - neutral conductor, blue


10. If there is on the luminaire label 'orientation to the road' is affixed install the luminaire in the direction indicated.




2. Prepare the luminaire for the instalation.



5. Connect the 2 core cable to the power supply (Class II.).

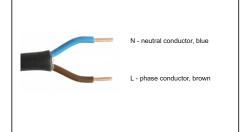


8. Connect the 2 pin connector Gesis to the power supply (Class II.).

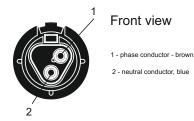


2 - neutral conductor, blue

3. Connect the 3 core cable to the power supply (Class I.).

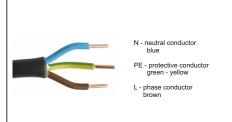

6. Connect the 3 pin connector Gesis to the power supply (Class I.).

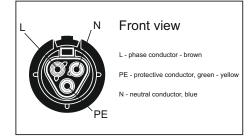


9. Fix the luminaire on the post.



Direction of radiation and orientation of the luminaire to the road. xx - designation of optics


Optics U01, U02

Optics Pxx, Mxx, Lxx

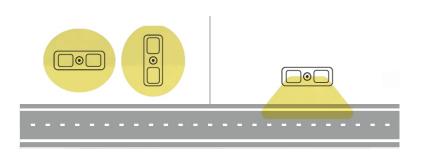



 $Aw = 0,047 \text{ m}^2$

 

 $Aw = 0,047 \text{ m}^2$



- Recomended installation height up to 6 meters.

- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

 
- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

- Caution, risk of electric shock

- Do not look directly or with optical aids into the light source RG1 d > 0,5 m
- This luminaire operates at mains voltage 220-240V, 50-60 Hz.

Any modification to this luminaire is forbidden.

- Replace any cracked protective shield.



8 kg

Cleaning:

clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

Instalation and maintainance: can provide only a person with an electrical qualification.

The company reserves the right to change technical data and printing errors.

ELEKTRO-LUMEN, s. r. o. Hranická 505 753 61 Hranice IV - Drahotuše Česká republika Telefon: +420 581 699 411 Fax: +420 581 699 419 E-mail: el-lumen@el-lumen.cz Web: www.el-lumen.cz



Copyright © ELEKTRO-LUMEN, s. r. o.