



 
1. Unpack the luminaire.




2. Prepare the luminaire for the installation.




3. Connect the 3 core cable to the power supply (Class I.).

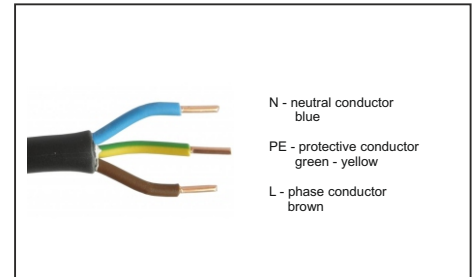

 
4. Connect the 5 core cable to the power supply (Class I.).

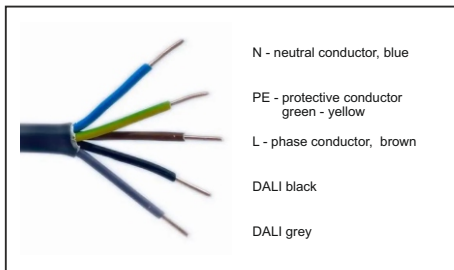

 
5. Connect the 2 core cable to the power supply (Class II.).

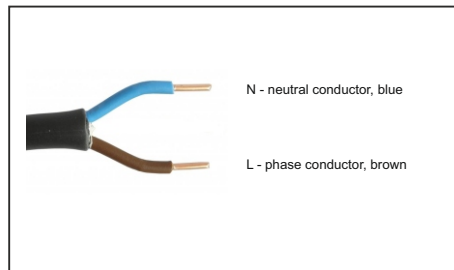

 
6. Connect the 3 pin connector Gesis to the power supply (Class I.).

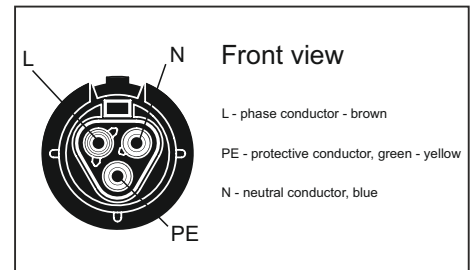

 7. Connect the 5 pin connector Gesis to the power supply (Class I.).

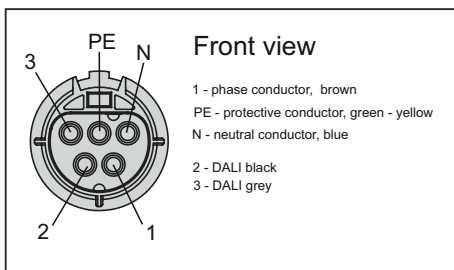

 8. Connect the 2 pin connector Gesis to the power supply (Class II.).

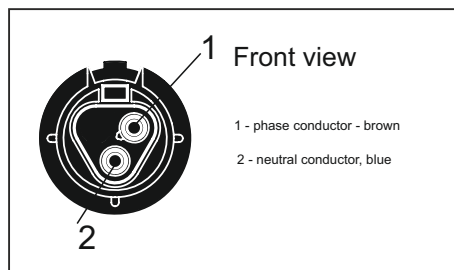



9. Fix the luminaire on the post.



 10. Tighten four Allen screws with tightening torque of 8 Nm.



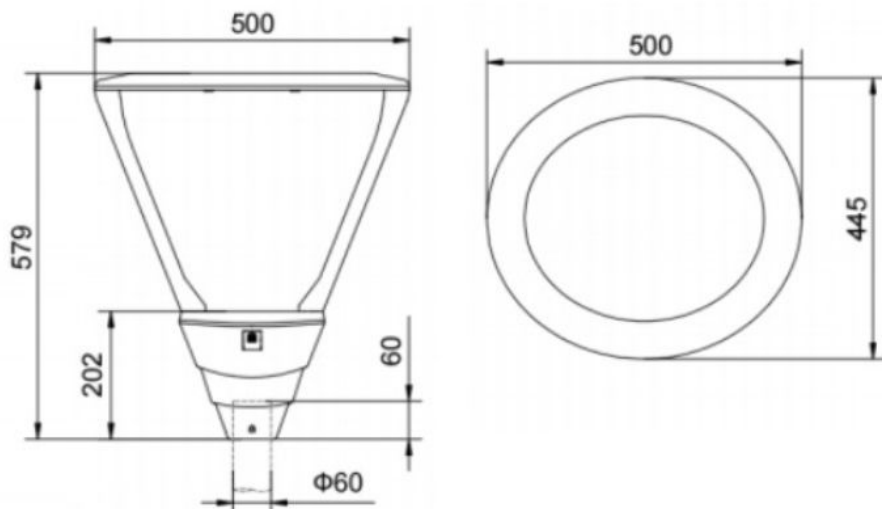

 = 9,8 kg

- Recommended installation height up to 6 meters.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- The light sources in this luminaire is only replaceable by the manufacturer or their technicians or a qualified person.

- **Caution, risk of electric shock** 

- Do not look directly or with optical aids into the light source RG1 d > 0,5 m



- This luminaire operates at mains voltage 220-240V, 50-60 Hz.

- Any modification to this luminaire is forbidden.

- Replace any cracked protective shield.



**Cleaning:**  
clean the luminaire with the standard detergents. DO NOT use any abrasive detergents or solvents.

**Installation and maintenance:**  
can provide only a person with an electrical qualification.

**ELEKTRO-LUMEN, s. r. o.**  
Hranická 505  
753 61 Hranice IV - Drahotuše  
Česká republika

**Telefon:** +420 581 699 411  
**Fax:** +420 581 699 419  
**E-mail:** el-lumen@el-lumen.cz  
**Web:** www.el-lumen.cz

